



MLK-18LED-S30

Merlin / Ketra Optical Framing Projector Track Head

Includes:

Merlin Optical Train, Adjustable Shutters, Iris, Stabilizer Bar, Two Piece Adapter, Ketra Socket, Ketra 25° S30 Lamp

Dimensions:

6.5" Length x 4" Width

Available Colors:

B= Black | W=White



PROJECTOR SPECIFICATIONS

Description:

Merlin / Ketra Precision Track Fixture
Optical Framing Projector Light
Compliance: UL,cUL,RoHS,FCC Class B

Catalog #:

MLK-18LED-S30

To Complete:

- Universal Track or Mono-point Canopy

Specifications:

- 1100lm
 - 120/60hz
 - Dimming Range 0.1-100%
 - Lutron Clear Connect-Type X
 - Constant Power Supply*
- *(included in Ketra Lamp Socket Assembly)

Requirements:

Track or Mono-point Canopy installation must be fixed and rigid to insure minimal movement and vibration. Stabilization bar must be utilized to keep the 45 Degree optimal angle to the center of the intended art.

Projector Kit Includes:

- Cast aluminum materials
- Black or White finish.
- Instructional Materials:
Detailed installation, Lens set up and final adjustments
- Supply and Installation by Certified Ketra dealer

Merlin/Ketra Representative:


Merlin/Ketra Dealer:



Merlin Lights, See the Magic®

MLK-18LED-S30

Merlin / Ketra Optical Framing Projector Track Head

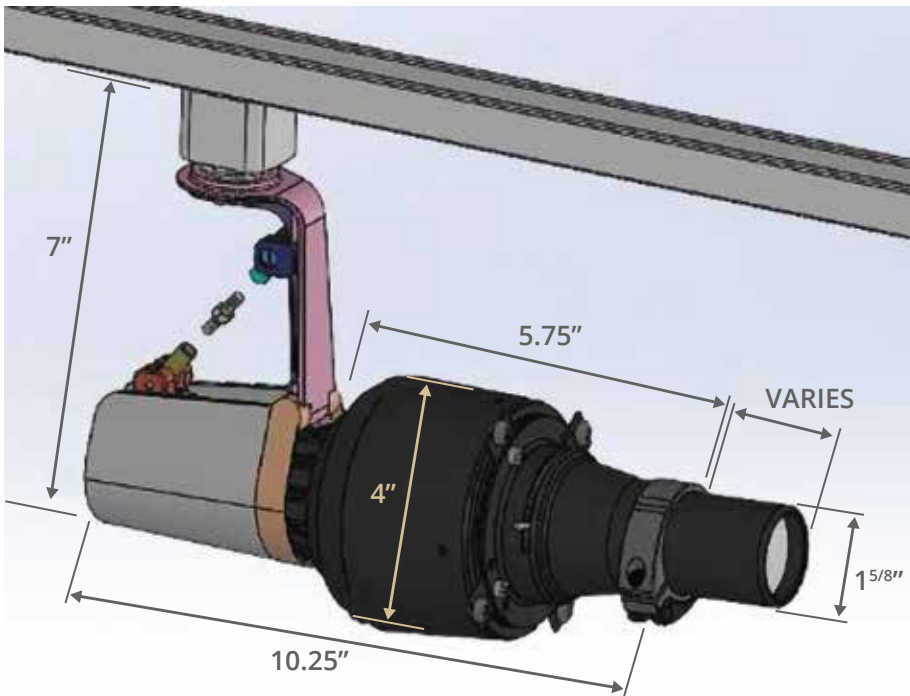

Installation Steps

- (1) Install Stabilization Bar orient 45 Degrees toward art center.
 - (2) Install Two piece locking Adapter to 25 Degree Ketra Lamp. Insure complete twist lock.
 - (3) Square up top Iris Slot and Center top Iris paddle. Ensure Iris is in the full open position.
 - (4) Energize Lamp. With paddle slightly open place light rectangle dead center of artwork adjusting stabilizing bar accordingly.
 - (5) Open slide paddles out as far as possible to ensure that the circle of light is completely covering the outside borders of the top of the artwork by at minimum 6 inches.
 - (6) Move paddles in to frame art. Focus. Clamp and close down Iris to eliminate light ticks from Iris adjustment
- Note: Minor adjustments of the entire unit up and down may be required to evenly crop the light ticks.*
- (7) Lightly tighten the 4 paddle allen screws to hold the light shape.
 - (8) Program color or tunable white and vibrancy to clients wishes.